

INVOLIGHT

DMX LED Triangle



LEDRX600


USER MANUAL

DMX LED Triangle Manual

Our DMX LED Triangle light offers many possibilities to achieve very nice laser effects which you want. It is specially designed for the stages, disco, night clubs etc. Please read the manual before operation.

A. SPECIFICATION

1. Power input: AC 110V/240V, 60Hz/50Hz
2. Power consumption: 45W
3. LEDs: 18*3W (6R, 6G, 6B)
4. Control feature: Built-in programs, auto running, DMX mode, M/S, sound-active mode
5. DMX channels: 3 CH
6. Operation mode: LED display
7. Size: 370*320*295mm
8. Weight: 4.1kg

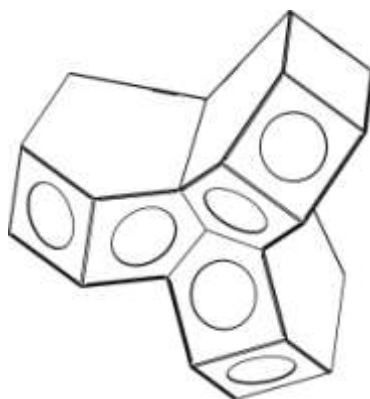

B. OPERATION

This series of product has rich effect programs, easier operation, there are five working modes:

- Auto running mode
- DMX mode
- Built-in programs mode
- M/S mode
- Sound active mode

1. Auto Running Mode

- 1) Press "MODE" button, enter auto run mode menu "AUF0".
- 2) Press "SETUP" button, enter setup auto run mode times menu "n×××"
- 3) Press "UP" or "DOWN" button to set up auto run mode time's value n001~n.100.
- 4) Press "SETUP" button, enter setup auto running mode speed menu SP××.
- 5) Press "UP" or "DOWN" button to set up speed value SP01~SPFL(SP100).
- 6) Press "SETUP" button, enter setup auto run mode flash menu FS××.
- 7) Press "UP" or "DOWN" button to setup strobe value F500~F599.

2. DMX Mode

- 1) Press “MODE” button, enter DMX mode menu d×××
- 2) Press “UP” or “DOWN” button to set up DMX address value **d001~d512**.
- 3) Press “SETUP” button, enter setup DMX mode 3 CH.

DMX Mode :

CH1			CH2	CH3
NO.	DMX value	LEDs Programs	LEDs running speed	LEDs flash frequency
1	0	OFF	NO USE	NO USE
2	1—10	PROGRAM01	SPEED 0—255	FLASH 0—255
3	11—21	PROGRAM02		
4	22—32	PROGRAM03		
5	33—43	PROGRAM04		
6	44—54	PROGRAM05		
7	55—65	PROGRAM06		
8	66—76	PROGRAM07		
9	77—87	PROGRAM08		
10	88—98	PROGRAM09		
11	99—109	PROGRAM10		
12	110—120	PROGRAM11		
13	121—131	PROGRAM12		
14	132—142	PROGRAM13		
15	143—153	PROGRAM14		
16	154—164	PROGRAM15		
17	165—175	PROGRAM16		
18	176—177	PROGRAM17		
19	178—188	PROGRAM18		
20	189--255	Sound Mode		

3. Built-in Programs Mode

- 1) Press “MODE” button, enter built-in program menu Pr××.
- 2) Press “UP” or “DOWN” button, select the effect programs **Pr01~Pr18**.
- 3) Press “SETUP” button, enter setup speed program menu SP××.
- 4) Press “UP” or “DOWN” button ,setup speed value **SP01~SPFL**(SP100).
- 5) Press “SETUP” button, enter setup strobe program menu FS××.
- 6) Press “UP” or “DOWN” button, setup strobe value **F500~F599**.

4. M/S Mode

Press “MODE” button, enter the slave mode SLAV.

5. Sound Active Mode

- 1) Press “MODE” button, enter sound active mode SoUn.
- 2) Press “SETUP” mode, enter setup sound active sensitivity menu So××.
- 3) Press “UP” or “DOWN” button to set up the value of sound active sensitivity value **5000 ~ 5031**.

C. LED Display Switching

1. Press “MODE” button to enter into the LED display switching mode menu LED
2. Press “SETUP” button to enter into the LED display ON or OFF.
3. Press “UP” or “DOWN” button to set up ON or OFF.

Remark: LED display will be on all the time if chose ON, and it would be switch off after 20 seconds if chose OFF.

D. LED Display Inversion

1. Press “MODE” button to enter into the display inversion mode menu dISP.
2. Press “SETUP” button to set up the standard display dISP and inversion display dSIP.

E. Version

1. Press “MODE” button to enter into the version mode menu Ver.
2. Press “SETUP” button to enter into the version V10.